


HOW TO USE CHEMICAL INDICATORS, BIOLOGICAL INDICATORS AND PROCESS CHALLENGE DEVICES TO MONITOR STERILIZATION

FIRST REPROCESSING CYCLE OF DAY

If using a pre-vacuum sterilizer a Bowie-Dick test must be done first, in an empty chamber.

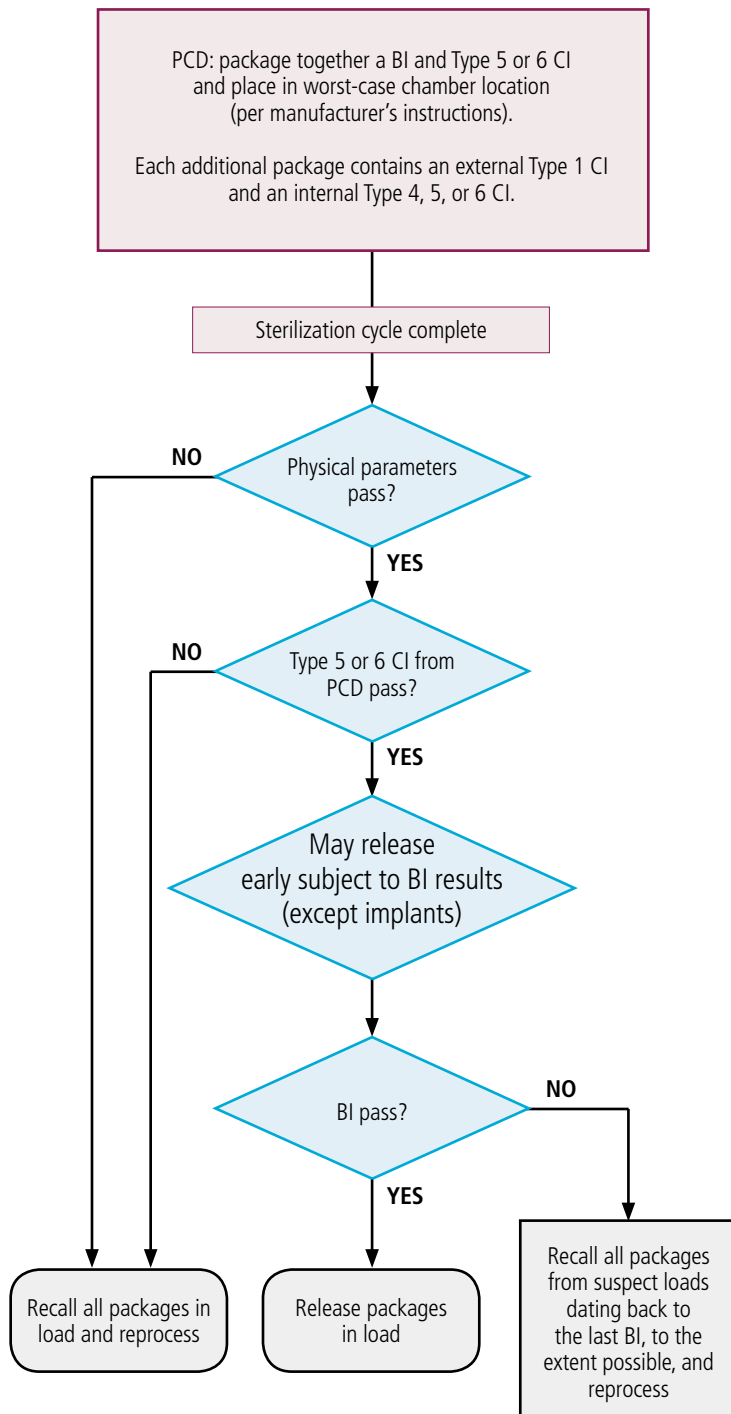

SUBSEQUENT REPROCESSING CYCLES

